

NEEWER X12

NEEWER X12 14-inch Teleprompter User Manual

Model: X12

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your NEEWER X12 14-inch Aluminum Alloy Teleprompter. Please read this manual thoroughly before using the product to ensure proper function and longevity.

PACKAGE CONTENTS

- NEEWER X12 Teleprompter
- RT-110 Remote Control
- Phone Holder
- Carrying Case
- Cleaning Cloth
- User Manual



Image: The NEEWER X12 Teleprompter, including the main unit, remote control, phone holder, and a hard-shell carrying case.


SETUP INSTRUCTIONS

Follow these steps to assemble your NEEWER X12 Teleprompter:

1. **Install on Tripod:** Mount the teleprompter base onto a compatible tripod or light stand.
2. **Adjust Adapter:** Loosen the screw and remove the adapter plate from the teleprompter base.
3. **Position Mirror:** Push the beam splitter mirror up and adjust it to an appropriate 45-degree angle for optimal viewing.
4. **Attach Hood (Part 1):** Begin zipping the fabric hood onto the teleprompter frame. **Caution:** Do not pull the zipper completely to the bottom, as this may cause it to detach.
5. **Secure Hood:** Ensure the hood is securely attached along the top and left/right sides of the mirror frame.
6. **Adjust Bracket:** Loosen the screw to pull out the camera/tablet bracket, then adjust its position before tightening the screw.
7. **Fix Adapter:** Re-attach the adapter plate to the teleprompter base and tighten the knob securely.
8. **Install Camera:** Mount your DSLR camera onto the adjustable bracket and tighten the knob to secure it.

9. **Complete Hood:** Zip the hood fully to complete the installation, ensuring it covers the camera lens area.

INSTALLATION STEPS

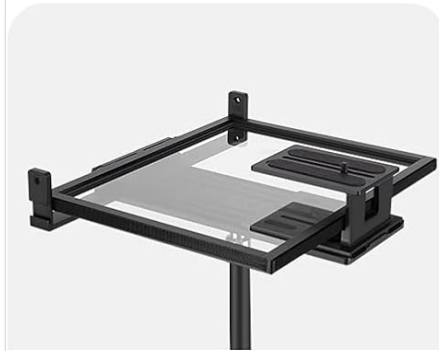

- 1 Install the teleprompter on a tripod or light stand



- 2 Loosen the screw and then remove the Adapte



- 3 Push the mirror up and adjust it to an appropriate angle (45°)



- 4 Zip the hood
Do not pull the zipper to the bottom, otherwise the zipper may fall off.



- 5 Install the hood on the mirror of the teleprompter. Make sure the hood is attached securely along the top and left/right sides



- 6 Loosen the screw to pull out the bracket and adjust the position of the bracket before tightening the screw



- 7 Fix the Adapte and tighten the knob



- 8 Install the camera, and tighten the knob



- 9 Zip the hood to complete installation

Image: A visual step-by-step guide illustrating the assembly process of the teleprompter, from mounting to securing the camera and hood.



Image: A detailed view of the camera mounting mechanism and the collapsible design, highlighting its portability.

OPERATING INSTRUCTIONS

1. Device Placement

The teleprompter is designed to hold smartphones or tablets up to 9.84" x 8.68" (25cm x 22cm). This includes models like iPad, iPad Air, and iPad Pro 11". It is not compatible with iPad Pro 12".

COMPATIBILITY

Compatible with any phone or tablet up to
9.84" x 8.68" / 25cm x 22cm



✓ Samsung / Huawei



✓ iPad / iPad Air / iPad Pro 11"




✗ iPad Pro 12.9"

Image: A visual representation of the teleprompter's compatibility with different tablet and smartphone sizes, indicating supported and unsupported models.

WIDE COMPATIBILITY

Dual cold shoe mounts and 1/4" female threads allow you to mount microphones, video lights, and other small photography accessories

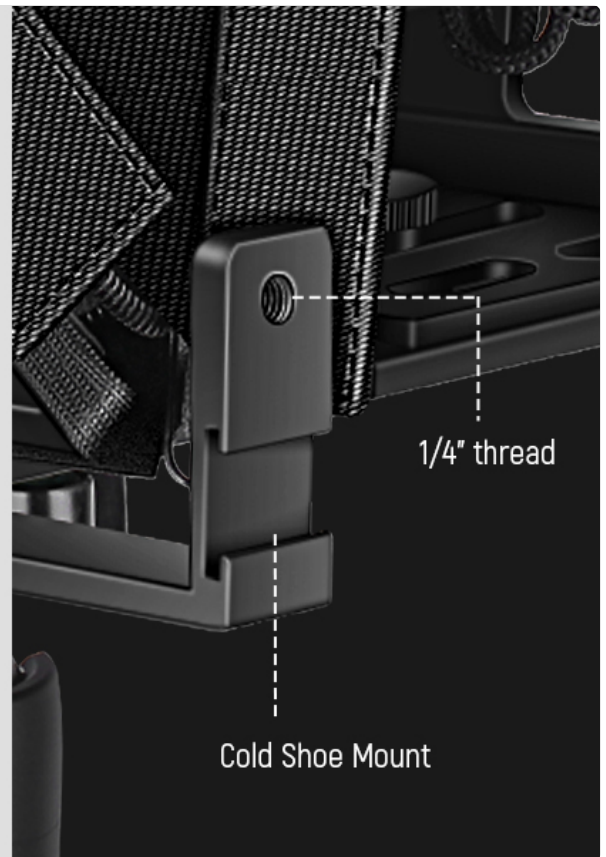

Cold Shoe Mount

Image: A close-up showing the dual cold shoe mounts and 1/4" female threads, allowing for attachment of microphones, video lights, and other accessories.

2. Using the NEEWER Teleprompter App

The NEEWER teleprompter app is compatible with iOS 11.0 or later and Android 6.0 or later. Download the app from your device's app store:

[Download for iOS \(App Store\)](#)

[Download for Android \(Google Play\)](#)

The app allows for adjustable playback speed, text size, background color, and document alignment. Ensure your device is connected to the teleprompter via Bluetooth through the app, not directly through your device's Bluetooth settings.



Image: A visual demonstrating the features of the upgraded NEEWER app, including text customization options and remote control functionality.

3. Using the RT-110 Remote Control

The included RT-110 remote control provides convenient operation of the teleprompter app. Pair the remote control with your smartphone or tablet within the NEEWER teleprompter app via Bluetooth. Do not attempt to pair it directly through your device's system Bluetooth settings.

- **Play/Pause:** Press the designated button to start or stop text scrolling.
- **Speed Adjustment:** Use the speed up (+) and speed down (-) buttons to control the scrolling pace.
- **Page Navigation:** Navigate through your script using the previous page and next page buttons.
- **Exit/Home (iOS):** For iOS devices, press the Home button to exit or turn the display on/off.
- **Menu:** The Menu button has no function assigned for iOS devices.



Image: A detailed view of the RT-110 remote control, highlighting its buttons and their corresponding functions for controlling the teleprompter app.

4. High-Definition Display

The teleprompter features a high-quality beam splitter glass with a special coating, ensuring 75% light transmittance. This allows for clear reflection of text from your tablet or smartphone, readable up to 10 feet (3 meters) away, while maintaining optimal light transmission to your camera lens. Note that the focal length of your camera lens needs to be more than 28mm, and it is not compatible with wide-angle lenses.

HIGH-DEFINITION DISPLAY

With a special processed coating and beam splitter glass, the teleprompter ensures your text is sharp and clear



Image: A visual demonstrating the high-definition display of the teleprompter, emphasizing text clarity and the 75% light transmittance of the beam splitter glass.



Image: A diagram illustrating how the special processed coating on the beam splitter glass ensures high clarity and readability of the reflected text, visible up to 10 feet.

MAINTENANCE

- **Cleaning the Beam Splitter Glass:** Use a soft, lint-free microfiber cloth, preferably the one provided, to gently wipe the glass. For stubborn smudges, a small amount of lens cleaning solution can be applied to the cloth (not directly to the glass). Avoid abrasive materials or harsh chemicals.
- **General Cleaning:** Wipe down the aluminum alloy frame and fabric hood with a dry or slightly damp cloth. Ensure all components are dry before storage.
- **Storage:** When not in use, disassemble the teleprompter and store it in the provided carrying case to protect it from dust, moisture, and physical damage.
- **Handling:** Handle the teleprompter with care, especially the beam splitter glass, to prevent scratches or breakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Text is blurry or unclear on the display.	Incorrect mirror angle; dirty beam splitter glass; tablet/smartphone screen brightness too low.	Adjust the mirror to a 45-degree angle. Clean the beam splitter glass. Increase the brightness of your tablet/smartphone screen.
Remote control not responding.	Remote not paired correctly; low battery in remote; remote paired directly via device Bluetooth instead of app.	Ensure the remote is paired within the NEEWER teleprompter app. Replace remote batteries. Disconnect from device Bluetooth and re-pair via the app.
Camera lens visible in the reflection.	Lens hood not properly positioned; camera lens focal length too wide.	Adjust the lens hood to fully cover the camera lens. Ensure your camera lens has a focal length greater than 28mm. Avoid wide-angle lenses.

Problem	Possible Cause	Solution
Tablet/smartphone does not fit.	Device dimensions exceed maximum compatibility.	Verify your device dimensions are within 9.84" x 8.68" (25cm x 22cm). Note that iPad Pro 12" is not compatible.

SPECIFICATIONS

- **Model:** NEEWER X12
- **Material:** Aluminum Alloy
- **Beam Splitter Glass:** 75% Light Transmittance
- **Max Tablet/Smartphone Size:** 9.84" x 8.68" / 25cm x 22cm (Not compatible with iPad Pro 12")
- **Recommended Camera Lens Focal Length:** > 28mm (Not compatible with wide-angle lenses)
- **Control:** RT-110 Remote Control, NEEWER Teleprompter App (iOS 11.0+ / Android 6.0+)
- **Connectivity:** Bluetooth
- **Product Dimensions:** 39.5"L x 26.4"W x 20.8"H (approx. 15.5" x 10.4" x 8.2" assembled)
- **Item Weight:** 6.53 pounds (approx. 2.96 kg)

14-INCH TELEPROMPTER



Phone & Camera



Bluetooth Control



Wide Compatibility



Image: A diagram illustrating the key dimensions of the NEEWER X12 teleprompter, including its overall length, width, and height.

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the official NEEWER website or contact their customer support directly. Keep your purchase receipt for warranty claims.

Online Resources:

- [Visit the NEEWER Store on Amazon](#)

© 2025 NEEWER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question